

Questions & Answers

Q: What appliances can I use this extension lead for?

Answer: It can be used with any 13A rated appliance fitted with a standard UK plug.

Q: Can the lead be used outside?

Answer: No, this product is for indoor use only.

Q: Can each socket be programmed individually?

Answer: There are four marked sockets that can be controlled. The other two sockets are uncontrolled and always powered when the rocker switch is ON.

Q. Does the unit have to be connected to the computer at all times?

A: No the unit has internal hardware timers for each controlled socket that allows it to operate disconnected from the computer once it has been programmed.


Q. I am having trouble connecting to my device via the internet.

A: Make sure you are registered with the server by pressing "Register" on the device web interface page in your browser and inputting your login id and password when the remote server screen appears. Then press the "Activate" button on the web interface page. If connection to the server is successful, some 3-10 seconds after pressing this button, there will be a status string message "Registered-Activated-Connected".

Q. I am still having trouble connecting to my device via the internet. It just says *Activated. Trying to connect* in the browser.

There may be a problem with your DNS IP address settings . The DNS settings are shown/set on the web interface page. Select LAN settings from the menu.

Check that the DNS address is valid – ie not 0.0.0.0. Typically this is obtained via DHCP from your router.

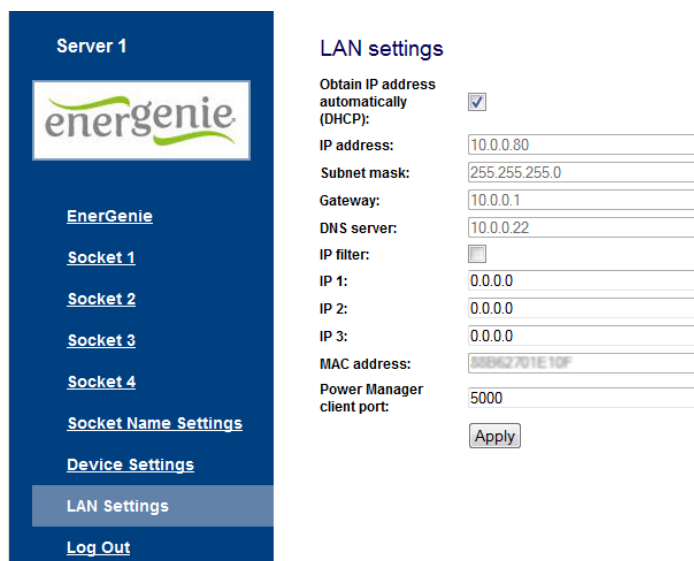


The image shows a screenshot of the EnerGenie web interface. On the left is a dark blue sidebar menu with the EnerGenie logo at the top. Below the logo are links for 'EnerGenie', 'Socket 1', 'Socket 2', 'Socket 3', 'Socket 4', 'Socket Name Settings', 'Device Settings', 'LAN Settings' (which is highlighted in a lighter blue), and 'Log Out'. The main content area is titled 'LAN settings' and contains the following configuration options:

- Obtain IP address automatically (DHCP):
- IP address:
- Subnet mask:
- Gateway:
- DNS server:
- IP filter:
- IP 1:
- IP 2:
- IP 3:
- MAC address:
- Power Manager client port:

At the bottom of the form is an 'Apply' button.

(You can check your router set up is OK. Typically you can log into your router via your browser typing in address 192.168.0.1 or 10.0.0.1. You will need to know the router login id and password which may be written on the back of the router. Most likely the DNS server address from your router will have your internet service provider's DNS server address automatically inserted.)

Q. I can operate it ok over my own local network and via the power manager software. However, when I try connecting over the internet via energenie.com it doesn't connect. After I log in, it brings up a message that it is executing a command and nothing further happens.

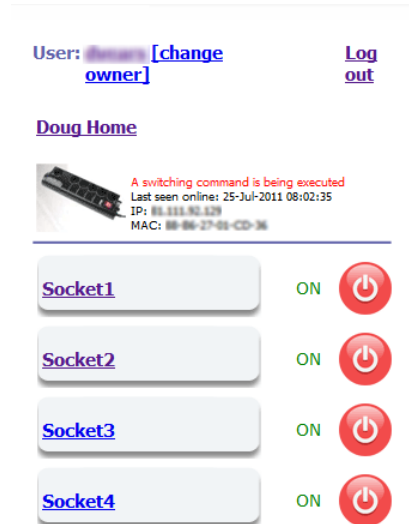

A: Ensure you are registered and activated as above.

There might be a conflict/problem with your router settings. Make sure that the router permits transmission of UDP packets from to the outside port 1025 (typical NAT configuration allows this). Please check the DNS server has been set up as in previous question.

The NTP time correction can be used to check whether the DNS IP address is correct. Under menu item device settings, check the NTP server address is set to a suitable string eg uk.pool.ntp.org and click Apply.

Power off the PMS using the rocker switch for 5 seconds. Power back on and view the web page.

Server 1



- [EnerGenie](#)
- [Socket 1](#)
- [Socket 2](#)
- [Socket 3](#)
- [Socket 4](#)
- [Socket Name Settings](#)
- [Device Settings](#)
- [LAN Settings](#)
- [Log Out](#)

Device settings

Server name:

Password:

Set device time: :

Use NTP for timer correction:

NTP server:

Wait for 1 minute. Refresh socket 1 page. Time in "Synchronized with NTP" string should be updated to the actual time. If not the DNS IP address may not be set correctly.

Server 1



- [EnerGenie](#)
- [Socket 1](#)
- [Socket 2](#)
- [Socket 3](#)
- [Socket 4](#)
- [Socket Name Settings](#)
- [Device Settings](#)
- [LAN Settings](#)
- [Log Out](#)

Socket 1 Socket 1 [Set schedule](#)

ON

Event schedule

Event	Date/Time
-------	-----------

Synchronized with NTP: 27 April 2012 14:29:04

27 April 2012 14:50:44

You may want to also try entering DNS the server address manually under LAN settings if it hasn't updated correctly.